


Indlæs de digitale kanaler på et Sony tv


Sørg for at der står det samme på din skærm, som på alle billederne, før du går videre.




- Tryk på **Home** på fjernbetjeningen

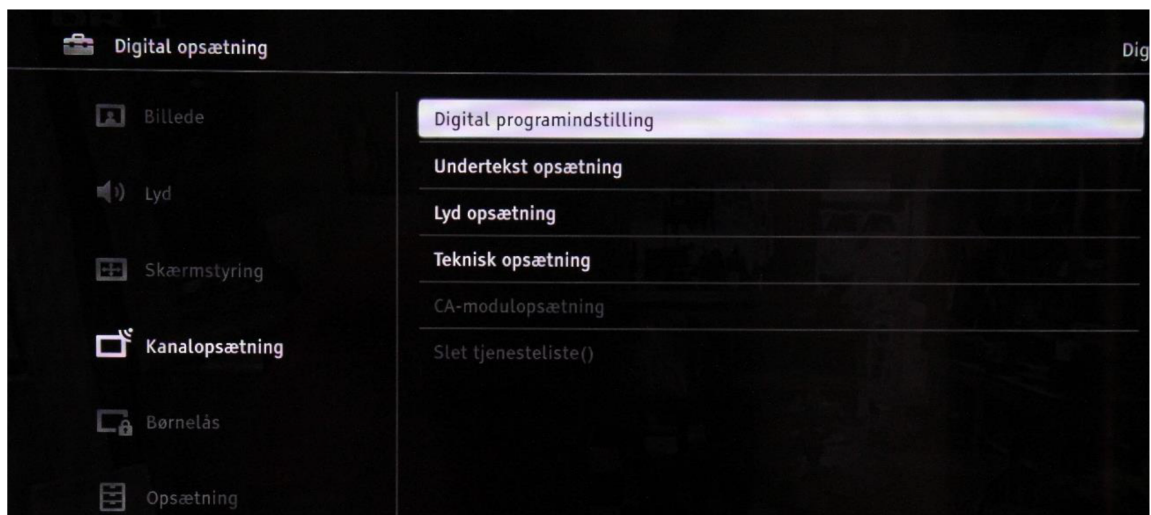

- Vælg **kanalopsætning** og derefter **Digital programindstilling**

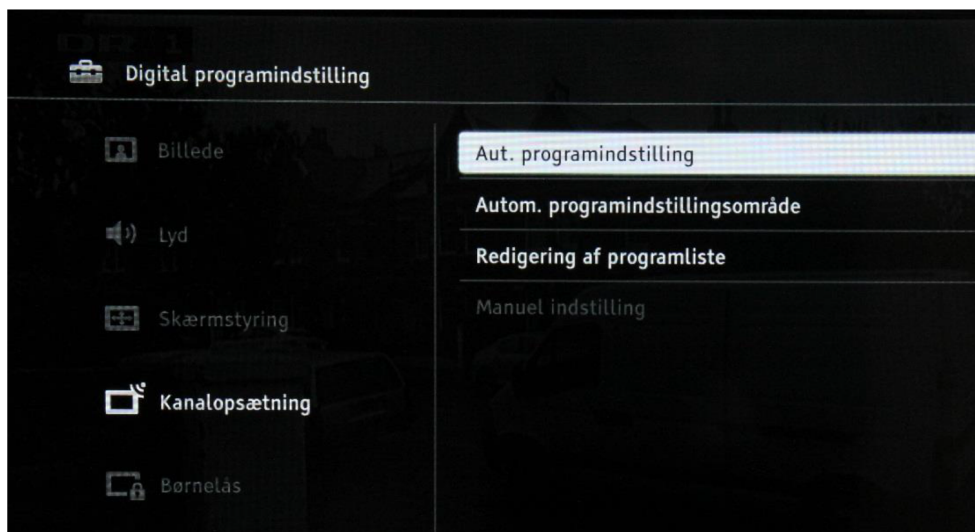


- Vælg **Aut. programindstilling**

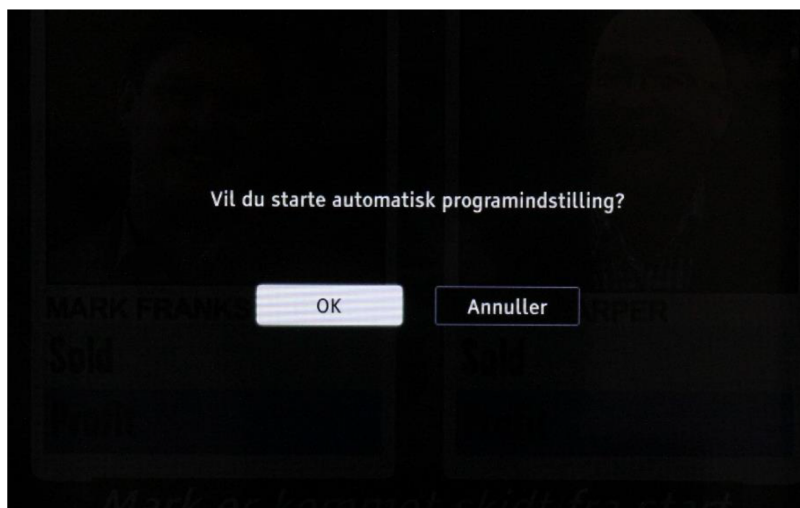

- Tryk **OK**



- Vælg **Kabel TV**

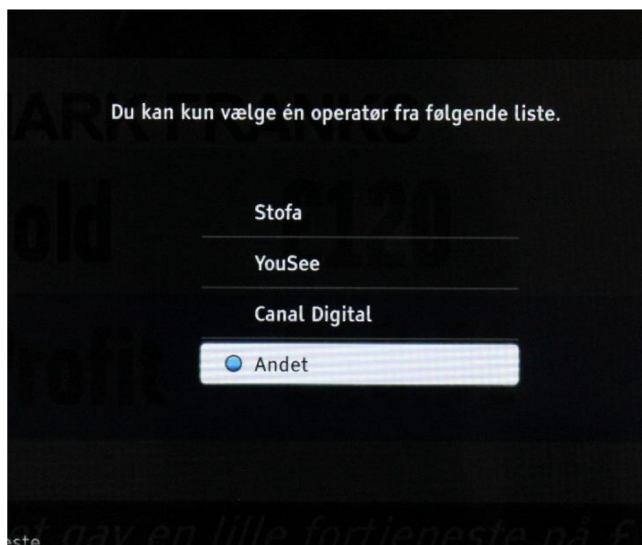

- Sæt operatør til **Andet**

Scanningstype	Hurtig scanning
Frekvens(MHz)	Auto
Netværks-ID	Auto

Scanningstype	Hurtig scanning
Frekvens(MHz)	Auto
Netværks-ID	Manuel

- Tryk på **Frekvens (MHz)** og vælg **Manuel**

The image shows a dark-themed user interface for channel scanning. It features three input fields stacked vertically, each with a label to its left. The first field is labeled 'Scanningstype' and contains the text 'Hurtig scanning'. The second field is labeled 'Frekvens(MHz)' and is empty. The third field is labeled 'Netværks-ID' and is also empty. Below these fields is a single button labeled 'Start'.

Scanningstype	Hurtig scanning
Frekvens(MHz)	
Netværks-ID	

Start

- Indtast _____ i feltet **Frekvens(MHz)**
- Indtast _____ i feltet **Netværks-ID**
- Sæt værdierne og tryk på **Start** for at starte kanalsøgning

Antal fundne tjenester: 84

